

 


Instruction Manual

Geschikt voor alle vloertypes



1. Insert the top handle into the bottom handle. to be sure the button into the hole.








2. Take out the frame and place on the fioor with connector stand, then take the mop body insert the connector, the mop is well assemblied when hearing the "ka" sound.



    
SAFE FOR













4. Sugeeze trigger to release a fine mist Of liquid onto the floor. As you clean, dirt and grease will be trapped in the microfiber pad.



- 5. ①Mop heads rotating to remove grime and dirt
 - 2 Push the button on the frame for polishing the floor.



6. When finished, peel pad from the strips. Durable Microfiber Pad can be washed and reused. If use disposable dust cloth, you may throw it away or use it for several times

