

WEEE Number: 80133970

INSTRUCTION MANUAL

LED SOLAR WALL LIGHT









TECHNICAL DATA

MODEL	VT-969	VT-970	VT-971	VT-972
SKU	93575	93576	93577	93578
LUMENS	75 Lm	75 Lm	75 Lm	75 Lm
WATTS	0.8W	0.8W	0.8W	0.8W
SOLAR PANEL WATTS	5.5V, 2W	5.5V, 2W	5.5V, 2W	5.5V, 2W
BATTERY	3.7, 1200mAh, 18650 Lithium	3.7, 1200mAh, 18650 Lithium	3.7, 1200mAh, 18650 Lithium	3.7, 1200mAh, 18650 Lithium
BEAM ANGLE	90°	90°	90°	90°
SENSOR RANGE	3-5 Meter	3-5 Meter	3-5 Meter	3-5 Meter
CHARGING RANGE	4-6 Hours	4-6 Hours	4-6 Hours	4-6 Hours
WORKING TIME	3-12 Hours	3-12 Hours	3-12 Hours	3-12 Hours
BODY TYPE	PC	PC	PC	PC
DIMENSION	Ø160x230mm	Ø170x230mm	Ø180x230mm	Ø160x160x230mm



MULTI-LANGUAGE MANUAL QR CODE

Please scan the QR code to access the manual in multiple languages.







Points de collecte sur www.quefairedemesdechets.fr Privilégiez la réparation ou le don de votre appareil!

INTRODUCTION & WARRANTY

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 3 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. The products are suitable for 10-12 Hours Daily operation. Usage of product for 24 Hours a day would void the warranty. This product is warranted for manufacturing defects only.

WARNING


- 1. Installation should be done by certified electrician.
- 2. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.





This marking indicates that this product should not be disposed of with other household wastes.


3. Replace any cracked protective shield.


INSTALLATION DIAGRAM

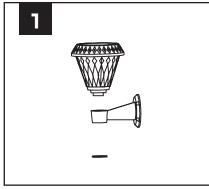


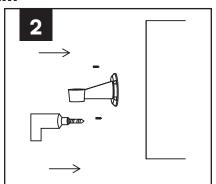

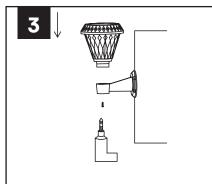

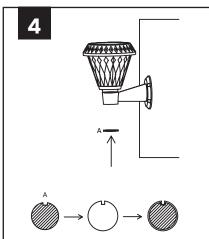

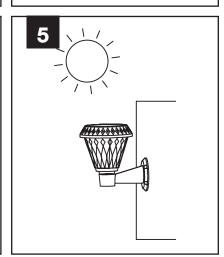


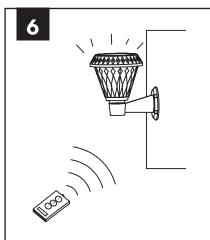

INSTALLATION INSTRUCTIONS

- Drill the holes in the wall
- Fix the bracket onto the wall
- Fix the lamp body on the bracket and tighten the screws
- Fix the plate cover on the bracket to cover the screws
- Please makes sure the luminaire is in correct angle in order to receive sunlight.
- After installation test the light using the remote control.
- The remote control is designed with an operation distance of 3-5m

REMOTE INSTRUCTIONS

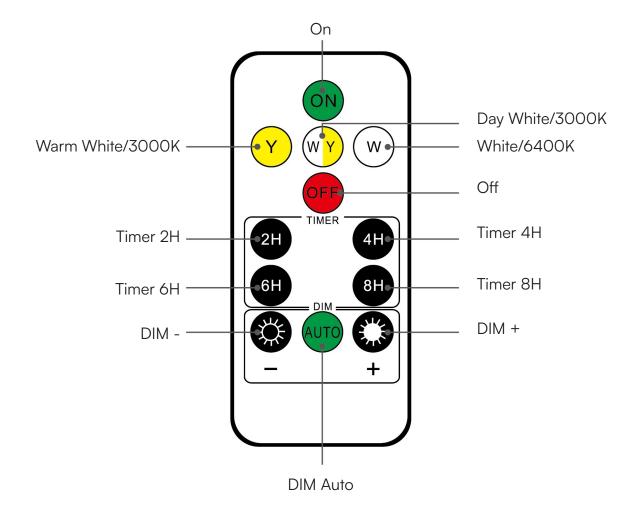

AUTO BUTTON FUNCTIONS

- 0-2 hours 100% brightness
- 2-6 hours 55% brightness
- 6-12 hours 20% brightness

MAINTENANCE & WARNING

- Do not use solvents, petrol, etc. Otherwise the light will be damaged.
- Clean the light with a dry, lint-free cloth.
- Check the solar panel for dirt regularly. If dirt or is present remove it to guarantee flawless function of the product.
- Especially during the winter, keep the product free from snow and ice.
- Confirm installation direction is correct (solar panel should be at top).
- Confirm no objects blocking the solar panel to receive sunlight.
- Keep away from the fire.
- Don't immerse in the water.









