

 


Meaningful Innovation.

WEEE Number: 80133970

# INSTRUCTION MANUAL

## LED SOLAR STRIP LIGHT

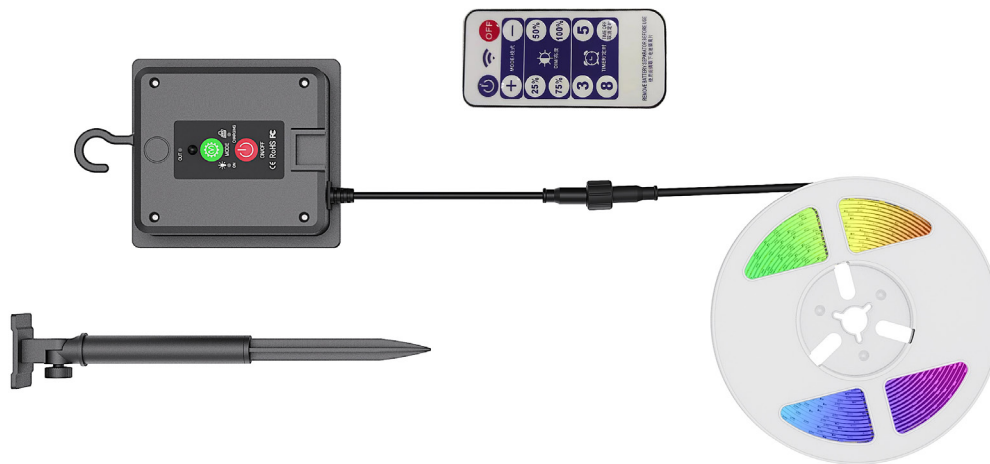

**IP67**  
RATING


**02** YEAR  
WARRANTY\*

### TECHNICAL DATA

 MODEL	SKU	SOLAR PANEL	BATTERY VOLTAGE	BATTERY CAPACITY	LED TYPE	LENGTH	BEAM ANGLE
VT-2835-60	23044 23045 23046	DC 5V, 1.2W	DC: 3.7V	1500mAh, 18650 Li-Ion	SMD 2835, 60 LEDs	5m	120°

### INTRODUCTION & WARRANTY

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 2 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. The products are suitable for 10-12 Hours Daily operation. Usage of product for 24 Hours a day would void the warranty. This product is warranted for manufacturing defects only.

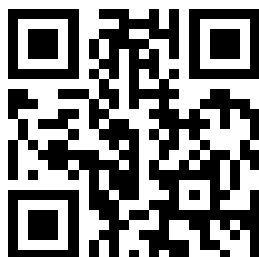

#### MULTI-LANGUAGE MANUAL QR CODE

Please scan the QR code to access the manual in multiple languages.

In case of any query/issue with the product, please reach out to us at: support@v-tac.eu  
For More products range, inquiry please contact our distributor or nearest dealers.  
V-TAC EUROPE LTD. Bulgaria, Plovdiv 4000, bul.L.Karavelow 9B

---

 
## **WARNING**

1. Please make sure to turn off the power before starting the installation.
2. The light source of this luminaire is not replaceable, when the light source reaches its end of life the whole luminaire should be replaced.




This marking indicates that this product should not be disposed of with other household wastes.

## **CONNECTION DIAGRAM**

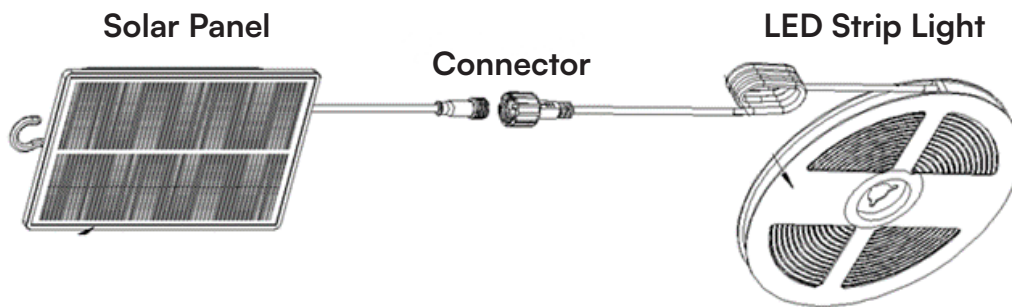

## **INSTALLATION INSTRUCTION**
 
### **1. Spike Installation**

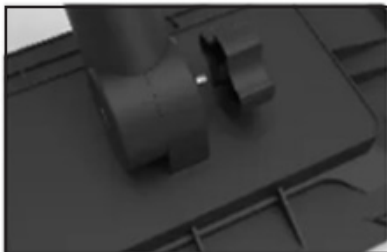

1. Fix the solar panel and connecting rod.



2. Plug the spike into the connecting rod.




3. Insert directly into the ground to complete the installation.



### **2. Hanging**


 
## REMOTE CONTROL FUNCTION

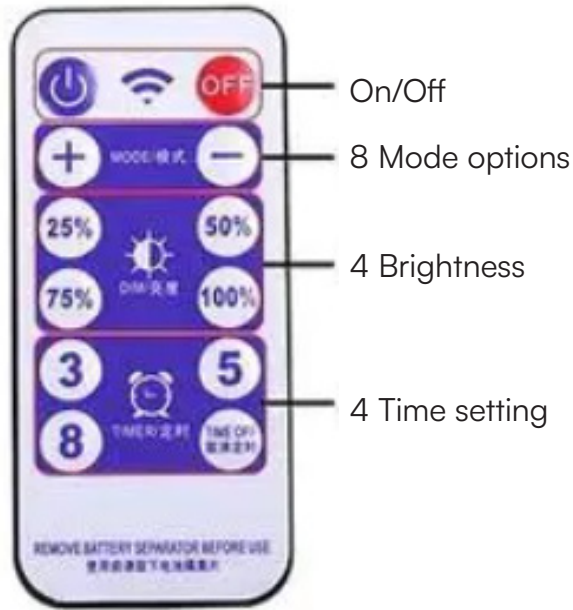

## PACKAGE CONTENTS

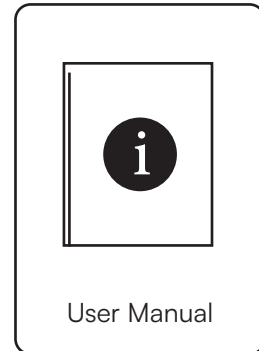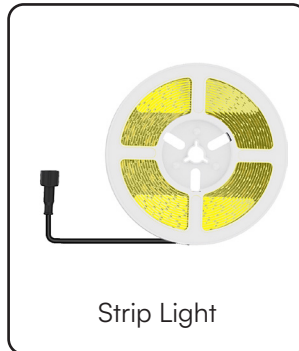  

RoHS



UK  
CA

