

EN

Main parts

See image A.

- 1 Front grill
- 2 Fan blade
- 3 Control panel
- 4 Remote control
- 5 Battery compartment
- 6 Cell battery
- 7 Screw
- 8 Rear grill
- 9 Power adapter connection
- 10 Power adapter

Preparing the product for use

See images B and C.

Switching on the product

See image D.

Using the product

See image E.

Fan speed

Indicator	Description
1	Low fan speed
2	Middle fan speed
3	High fan speed

Timer function

Indicator	Description
1	1 hour
2	3 hours
Off	Timer off

Oscillation

Indicator	Description
⌋	Horizontal oscillation
)	Vertical oscillation
Off	Oscillation off

Cleaning

 
See images F and G.

Clean the product every 3 months.

Replacing the battery of the remote control

See image H.

Full manual



NL

Belangrijkste onderdelen

Zie afbeelding A.

- 1 Rooster voor
- 2 Ventilatorblad
- 3 Bedieningspaneel
- 4 Afstandsbediening
- 5 Batterijvak
- 6 Knopcelbatterij
- 7 Schroef
- 8 Rooster achter
- 9 Verbinding voedingsadapter
- 10 Voedingsadapter

Het product klaarmaken voor gebruik

Zie de afbeeldingen B en C.

Het product inschakelen

Zie afbeelding D.

Gebruik van het product

Zie afbeelding E.

Ventilatorsnelheid

Controlelampje	Beschrijving
1	Ventilatorsnelheid laag
2	Ventilatorsnelheid gemiddeld
3	Ventilatorsnelheid hoog

Timerfunctie

Controlelampje	Beschrijving
1	1 uur
2	3 uur
Uit	Timer uit

Oscillatie

Controlelampje	Beschrijving
⌋	Horizontale swing
)	Verticale swing
Uit	Oscillatie uit

Reinigen

Zie de afbeeldingen F en G.

Reinig het product om de 3 maanden.

Vervangen van de batterij van de afstandsbediening

Zie afbeelding H.

Volledige handleiding



DUUX®

Designed in The Netherlands by Duux BV.
 Duux BV, P.O. Box 145, 5400 AC Uden Netherlands, www.duux.com
 © 2023 Duux. All rights reserved.
 DUUX® is a trademark of Duux BV,
 registered in the EU and other countries.
 The brand cited belongs exclusively to the respective owners.
 Specifications are subject to modification without notice.

