


X-SENSE



User Manual

RC01 Remote Controller



Handleiding

Deze handleiding bevat belangrijke informatie over hoe uw X-Sense-afstandsbediening werkt. Lees deze handleiding volledig door voordat u de afstandsbediening installeert en gebruikt. Als u deze afstandsbediening installeert voor gebruik door anderen, moet u deze handleiding (of een kopie ervan) achterlaten bij de eindgebruiker.

Inleiding

Dankuwel voor het aanschaffen van onze afstandsbediening voor uw rookmelder. De producten van X-Sense worden verbeterd en het productportfolio wordt constant uitgebreid, dus bezoek gerust onze website om deel te nemen aan ons nieuws. RC01 is een speciale afstandsbediening voor X-Sense rookmelders XS01-W die draadloos zijn verbonden. De eenheid regelt eenvoudig de onderling verbonden rookmelders, wat gebruikers de moeite bespaart om omhoog te reiken en naar het plafond te reiken om alarmen te testen of om de pauzefunctie te activeren. Het is prettig om niet op ladders te hoeven staan en op stoelen

te balanceren als de afstand tot het plafond hoog is. **NOTTIE!** Deze afstandsbediening past niet op andere modellen dan hierboven vermeld.

Belangrijke veiligheidsinstructies en richtlijnen


Houd de testknop niet langer ingedrukt dan in deze handleiding wordt aanbevolen. Druk ook niet meerdere keren, wacht tot de rookmelders voldoende tijd te hebben gehad om te reageren. Verander in geen enkel geval van apparaat, gebruik het product alleen waarvoor het bedoeld is. Gebruik alleen de gespecificeerde batterijen en zorg ervoor dat de polariteitsmarkering overeenkomt met het opstarten en vervangen van de batterij.

Inhoud van de verpakking

- 1 x Afstandsbediening (inclusief batterij)
- 1 x Zelfklevende tape
- 1 x Sleutel
- 2 x Schroef
- 2 x Plug
- 1 x Handleiding

Productoverzicht

1. LED Indicator

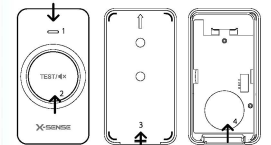

2. Test/Hush knop

3. Achterplaat

4. Batterij

Gebruiksaanwijzing

Batterij installatie

Open de achterplaat door de meegeleverde sleutel in de sleuf aan de onderkant van de achterkant van de afstandsbediening te steken. Verwijder de isolatiefolie van de knoopcelbatterij. Zorg ervoor dat de batterij correct gepolariseerd is (match de plussen en minnen met de markeringen), plaats de batterij op zijn plaats en sluit de achterplaat.

Koppel de afstandsbediening met X-Sense rookmelder XS01-W (apart verkrijgbaar)

1. Werk met slechts twee units tegelijk, één rookmelder en één afstandsbediening
2. Draai de grondplaat van de rookmelder in de richting van het open slotje aan de zijkant. De testknop op de melder knippert nu één keer kort rood
3. Druk vier keer op de test-/pauzeknop op de rookmelder, deze unit piept één keer en de rode LED zal langzaam knipperen om aan te geven dat de melder in de koppelingsmodus is en wacht op een nieuwe unit
4. Druk tweemaal op de test / pauze-knop op de afstandsbediening, de LED knippert snel, wat aangeeft dat hij nu naar een apparaat zoekt om verbinding mee te maken
5. Draai de grondplaat van de rookmelder weer richting het dichte slotje
6. Nadat u met succes een gekoppelde groep heeft gemaakt, piepen beide apparaten één keer. De koppelmodus is nu beëindigd. De rookmelder gaat nu in stand-by modus.

Test de draadloze verbinding tussen de rookmelders

1. Houd de testknop ingedrukt binnen het bereik van de afstandsbediening. De LED-indicator op de afstandsbediening gaat knipperen.
2. Nadat de rookmelders het signaal hebben ontvangen (duurt ongeveer 7 seconden), gaan hun LED-indicatoren knipperen en gaan de rookmelders continu af.
3. Laat de testknop los, de LED-indicator op de afstandsbediening stopt met knipperen om aan te geven dat het testen is beëindigd en het alarmsignaal stopt.

Zet rookmelders stil

Druk op de hush knop om de rookmelders uit te zetten als er alarmen zijn om een bekende reden, zoals kookdampen, stoom of iets dergelijks, wat storende valse alarmen kan veroorzaken.

NOTTIE! Zet nooit alarmen uit waarvan u de oorsprong niet weet, onderzoek eerst voordat u het alarm uitzet.

Tijdens een alarmtoestand, klik dan

constant en gaat na ongeveer 3 seconden uit op de hush knop en alle gekoppelde apparaten met de eerste rookmelder zullen stoppen met alarmeren. Druk nogmaals om het geactiveerde rookalarm uit te zetten. De LED op de afstandsbediening knippert blauw bij elke druk om te bevestigen dat het de opdracht heeft ontvangen.

Hoe de batterijstatus van de afstandsbediening te testen

In de stand-bymodus (niet-alarmodus): als u kort op de testknop op de afstandsbediening klikt, knippert de LED-indicator op de afstandsbediening blauw, wat een normale werking en voldoende batterijniveau aangeeft.

Technische specificaties

Transmissiefrequentie	868 MHz
Bereik van de afstandsbediening	15 m
Minimale en maximale temperatuur	0-50 °C
Type batterij	3 V CR2032 Lithium Batterij
Levensduur batterij	1 jaar

Oplossingen

Probleem	Mogelijke oorzaak	Oplossing
De indicator op de afstandsbediening licht niet op als ik op de knop druk.	De isolatiefolie op de batterij is er niet afgehaald	Verwijder de isolatiefolie
	De batterij is niet correct geplaatst (polarisatie of positie)	Haal de batterij eruit en plaats deze opnieuw. Zorg ervoor dat de contacten schoon zijn.
Het rookalarm reageert niet op de afstandsbediening	De batterij is bijna leeg.	Vervang door een nieuwe batterij.
	Koppelen mislukt.	Koppel de afstandsbediening en rookmelders opnieuw.
	Buiten bereik of storing van de omgeving / andere apparaten.	Ga naar een dichterbij gelegen locatie of een andere plaats en probeer het opnieuw.

Let op! Het bereik van de afstandsbediening is afhankelijk van veel factoren. De werkingsafstand varieert afhankelijk van de werkelijke gebruiksomgeving of radio-omgevingsfactoren van andere elektronische apparaten in de buurt. Voorkom communicatieproblemen of onderbrekingen door na te denken over alles wat de radiocommunicatie kan beïnvloeden. Elektromagnetische golven kunnen worden gegenereerd door verschillende apparaten, zoals televisies, inductiekookplaten of magnetrons.

Milieubescherming

Elektrisch afval mag nooit bij het normale huisvuil worden gegooid. Recycle het apparaat en de batterijen waar recyclingfaciliteiten zijn. Neem contact op met uw plaatselijke overheid of dealer voor advies over recycling.



Fabrikant

X-Sense Innovations Co., Ltd.
Adres: B4-503-D, Tower B, Kexing Science Park, No. 15 Keyuan Road, Technology Park Community, Yuehai Avenue, Nanshan District, Shenzhen, 518057, CHINA
Email: support@x-sense.com



English

This manual contains important information on how your X-Sense remote control works. Be sure to read this manual completely before installing and using the remote control. If you install this remote control for the use of others, you must leave this manual (or a copy of it) with the end user.

Introduction

Thank you for purchasing our remote control for your smoke alarm system. X-Sense products are being improved and the product portfolio is constantly being expanded, so feel free to visit our website to take part in our news. RC01 is a dedicated remote control for X-Sense XS01-W smoke alarms that are wirelessly connected. The unit easily controls the interconnected smoke alarms, which saves users the effort of reaching up and reaching towards the ceiling to test alarms or to activate the pause function. It is nice to not have to stand on ladders and balance on chairs if the distance to the ceiling is high. **NOTE!** *This remote control does not fit any models other than those listed above.*


Important Safety Instructions and Guidelines

Do not hold or block the test button for a longer time than recommended by this manual. Also, do not press repeatedly, and be sure to wait until the smoke alarms have had sufficient time to react. Under no circumstances change the device, and only use the product for what it is intended for. Use only the specified batteries and make sure to match the polarity marking at start-up and battery replacement.

Package Contents

- 1 × Remote Controller (Battery Included)
- 1 × Adhesive Tape
- 1 × Key
- 2 × Screw
- 2 × Anchor Plug
- 1 × Manual

Product Overview

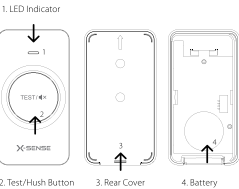

Operating Instructions

Battery installation

Open the rear cover by inserting the supplied key into the slot at the bottom of the back of the remote control. Remove the insulating film on the button cell battery. Make sure the battery is correctly polarized (match the pluses and minuses with the markings), place the battery in position and close the lid.

Pair the remote control with X-Sense XS01-W smoke alarms (purchased separately)

1. Create an interconnected group of smoke alarms according to the enclosed operating instructions in the smoke device shipping box.
2. Then work with only two units at a time, one smoke alarm and one remote control.
3. Press the test/pause button on the smoke alarm four times, this unit will beep once and the red LED will flash slowly, indicating that it has entered pairing mode and is waiting for a new unit to be added.
4. Press the test/pause button on the remote control twice, and the LED flashes quickly, indicating that it is now searching for a device to connect.
5. After successfully creating a linked group, both devices will beep once and automatically end the pairing mode. When this is done, the smoke alarm flashes only once per minute to indicate that it is now in normal monitoring mode. The LED indicator on the remote control will light up constantly and then go out after about 3 seconds.

Test the wireless connection between the smoke alarms

1. Hold down the test button within the range of the remote control. The LED indicator on the remote control will then flash.
2. After the smoke alarms have received the signal (takes about 7 seconds), their LED indicators will flash, and the smoke alarms will sound continuously.
3. Release the test button, the LED indicator on the remote control will then stop flashing, indicating that testing has ended, and the alarm sound will stop.

Hush smoke alarms

Just press the hush button to silence the smoke alarms when there are alarms for a known reason, such as fumes from cooking, steam, or the like, which may cause disturbing false alarms.

NOTE! *Never hush alarms that you do not know the origin of, and investigate before silencing.*

During an alarm condition, click on the hush button once and all devices paired with the initial smoke alarm will be silenced. Press again to silence the smoke alarm that initiated the alarm.

The LED on the remote control flashes blue for each press to confirm that it has received the command.

How to test the battery status of the remote control

In standby mode only (non-alarming mode), if you briefly click the test button on the remote control, the LED indicator on the remote control flashes blue, indicating normal operation and sufficient battery level.

Technical Specifications

Transmission Frequency	868 MHz
Remote Control Range	15 m
Operating Temperature	0-50 °C
Battery Type	3 V CR2032 Lithium Battery
Battery Lifetime	1 year

Troubleshooting

Issue	Possible Cause	Solution
The indicator on the remote controller does not light up when I press the button.	The insulating film on the battery has not been peeled off.	Peel off the insulating film.
	The battery is not properly installed (polarization or position).	Take out the battery and re-install it again. Make sure the contacts are clean.
	The battery power is low.	Replace with a new battery.
Smoke alarms do not respond to the remote controller.	Unsuccessful pairing.	Pair the remote controller and smoke alarms again.
	Out of range or interference from the environment/ other devices.	Move to a closer location or another place and try again.

Note! *The range of the remote control depends on many factors. The operating distance varies depending on the actual operating environment or radio environment factors from other electronic devices in the vicinity. Avoid communication problems or interruptions by thinking about anything that may affect the radio communication. Electromagnetic waves can be generated by a variety of devices such as televisions, induction cookers or microwave ovens.*

Environmental Protection

Electrical waste shall never be disposed of with normal household waste. Recycle the unit and batteries where recycling facilities are located. Contact your local authority or dealer for advice on recycling.



Manufacturer

X-Sense Innovations Co., Ltd.
Address: B4-503-D, Tower B, Kexing Science Park, No. 15 Keyuan Road, Technology Park Community, Yuehai Avenue, Nanshan District, Shenzhen, 518057, CHINA
Email: support@x-sense.com

