

User Manual

Professional AC
motor



Components

1. Cool shot button
2. Speed & temperature control button
3. Air inlet cover
4. Concentrator nozzles
5. Diffuser



Technical Specifications

- Professional AC motor – Power 1800-2000W
- Single Voltage – 110V/60Hz and 220V/50Hz
- 3 Heat settings, 2 speed & one cool settings
- >8 ft rotating swivel cord with safety plug
- Intended for household, hotel & professional use

Warning

- Not recommended for young children and close supervision is needed.
- Inexperienced or people with physical, sensory or mentally challenged should be monitored.
- If you use the appliance in a bathroom, pull the plug out of the socket and keep it away from water.
- Do not use the device while it's susceptible to the water.
- In case the dryer slips into the water while turned on, do not try to reach it into water; simply unplug it first.
- For enhanced safety, it is recommended to install a differential circuit breaker with a nominal operating differential current that does not exceed 30mA (10mA is ideal) in the electric circuit of the bathroom.

General safety instructions

- Before using this product, please read carefully this instruction manual and save it for future use.
- Before connecting the appliance, check the voltage indicated on the appliance corresponds to the local mains voltage.

- **Always unplug the appliance in the event of:**
 - When not in use
 - When you attach accessories
 - Before cleaning it
 - In case of any troubles or malfunctions
- In order to protect children from risks of electrical shocks, never leave the appliance unattended when it is plugged in.
- Check both the product and the cable regularly; do not use the product if you find any damages.
- Keep power cord away from hot surface to prevent melting.
- Use original accessories only.
- When hair dryer is in use, its air inlets and outlets must never be closed.
- Never use the appliance with wet or moist hands.
- In case the appliance becomes moist or wet, please unplug it immediately from the socket.
- Use the device only for its intended purpose in order to avoid possible fires and damages to the product; never use and place the product under blankets, towels or cushions.
- In order to avoid the product from possible overheating, it is advisable to unwind the cable completely and not to keep the product switched on while it is not in use.
- **Attention:** the nozzle becomes hot during operations. Avoid direct contact of your body parts with the hot surface while the unit is on.

Operation Instructions

- Towel dry your hair to remove excess moisture.
- Fully unwind the cable and plug in to the main power supply.
- Slide the ON/OFF button to switch on to the suitable air intensity and heat setting for your hair.
- Cold and medium heat setting for gentle drying and shaping with minimal damage.
- High heat setting ensures strong intensity of air for rapid drying.
- Start sectioning your hair and blow dry from your roots towards the ends.
- For extra root lift, hold the dryer under the roots for a few seconds.
- Use the cool shot function to create longer-lasting style.

- Push and hold the ON/OFF button to switch off the dryer
- Switch off after use and unplug it from the main power supply
- Allow to cool down and the pack away

Cool-shot

This function ensures longer-lasting blow dry by blasting the cool air throughout the hair to help set the style in place. Upon releasing this switch, the appliance will operate again at the preset temperature.

Professional concentrator

The concentrator allows you to address the airflow straight to the locks to ensure easy hair styling.

Cleaning the filter

Remove the cover as indicated in the picture and clean the ventilating filter using a damp cloth.



Maintenance and Storage Information

- After styling, place the unit on a flat and heat resistance surface
- Switch off and unplug the unit immediately after usage.
- Allow to cool down completely before cleaning or packing away
- Do not place or store in any wet or damp areas
- Do not hang by power cord when storing
- Do not coil the cord around the unit
- Do not unplug the product pulling it from the cable or from the product itself

Important Warranty Information

Hair dryer has been rigorously tested during manufacturing to ensure the highest level of safety and operation. It is scientifically designed to be free from defect under normal usage.

 Qumax

— Personal Care —



Made in China


Gebruiksaanwijzing

Professionele AC
motor



Onderdelen

1. Cool shot-knop
2. Snelheids- en temperatuurknop
3. Luchtinlaatklep
4. Opzetstukken
5. Diffuser

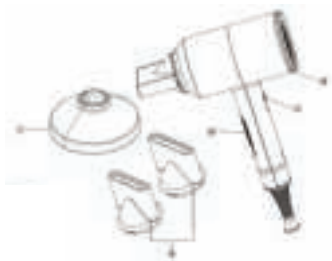

Technische Specificaties

- Professionele AC motor 1800 – 2000W
- Spanning – 110V/60Hz en 220V/50Hz
- 3 Hittestanden, 2 snelheid & 1 koel stand
- 2,5 meter kabel met veiligheidsstekker
- Bedoeld voor zowel thuis als professioneel gebruik

Waarschuwing

- Niet aan te raden voor jonge kinderen. Begeleid deze kinderen zodra ze het gebruiken.
- Onervaren mensen of mensen met een fysieke of mentale afwijking kunnen begeleiding gebruiken bij het drogen
- Gebruik je de haardroger in de badkamer, trek dan de stekker uit het stopcontact zodra je klaar bent en houd het weg van water
- Gebruik het apparaat niet bij aanraking met water
- Indien de haardroger in het water valt terwijl het aanstaat, probeer het niet te pakken. Trek eerst de stekker uit het stopcontact
- Voor extra veiligheid, installeer een differentiële stroomonderbreker met een nominale differentiële stroom die niet hoger is dan 30mA (10mA is ideaal) in het elektrische circuit van de badkamer

Algemene veiligheidsvoorschriften

- Voor gebruik, lees de instructies grondig door en bewaar deze voor toekomstig gebruik.
- Voor het aansluiten, check of de aangegeven spanning correspondeert met de lokale netspanning.

- **Ontkoppel het apparaat altijd:**

- Na gebruik
 - Bij het koppelen van accessoires
 - Voordat je het schoonmaakt
 - Bij problemen of storingen
- Om kinderen te beschermen van risico's en elektronische schokken, mag je het apparaat alleen achterlaten terwijl de stekker in het stopcontact zit
 - Kijk het apparaat en de kabel zo nu en dan na. Stop met gebruiken zodra je beschadigingen tegenkomt
 - Houd de kabel weg bij hitte om smelten te voorkomen
 - Gebruik de haardroger niet met natte of vochtige handen
 - Trek de stekker direct uit het stopcontact zodra het apparaat nat wordt
 - Gebruik de haardroger slechts waarvoor het bedoeld is. Gebruik het niet onder dekens, handdoeken en kussens. Zo voorkom je brandgevaar
 - Om verhitting te voorkomen, rol je de kabel volledig uit en laat je de haardroger niet aanstaan, wanneer het niet wordt gebruikt
 - **Let op:** De opzetstukjes worden heet tijdens gebruik. Vermijd daarom direct contact met het apparaat

Gebruiksaanwijzing:

- Maak je haar handdoek-droog om overtollig vocht weg te halen
- Rol de kabel volledig uit en stop de stekker in het stopcontact
- Gebruik de aan/uitknop om de geschikte lucht- en hittestand te vinden
- De koude en medium hittestand zijn voor het voorzichtig drogen voor minimale schade aan het haar
- De hogere hittestand zorgt voor een sneller droogproces
- Verdeel het haar en droog je haar vanaf de wortels naar de haareindes
- Houd de haardroger bij de haarwortels voor een paar secondes voor een extra wortel lift
- Gebruik de cool shot-knop voor een langer behoud van je stijl
- Druk op de aan/uitknop en houd deze in om de haardroger uit te zetten
- Schakel het apparaat uit na gebruik en haal de stekker uit het stopcontact
- Voordat je het opbergt, laat het eerst afkoelen

Cool-shot

Deze functie staat garant voor een langer behoud van je haarstijl. Dit doet de haardroger door koele lucht door je haar te blazen. Nadat je de knop loslaat, zal het drogen weer op de ingestelde temperatuur voortzetten.

Professionele concentrator

De concentrator helpt je de lucht precies te plaatsen op de stukken haar om het stijlen makkelijker te maken.

Cleaning the filter

Verwijder de klep zoals afgebeeld hiernaast en maak het filter schoon doormiddel van een vochtige doek.



Onderhoud en opbergen

- Na het stijlen, plaats de haardroger op een vlak en hittebestendig oppervlak
- Doe de haardroger uit en haal direct de stekker uit het stopcontact
- Laat het apparaat volledig afkoelen voordat je het opbergt
- Berg het niet op in vochtige of natte ruimtes
- Hang de haardroger niet op aan de kabel
- Rol de kabel niet om de haardroger heen bij het opbergen
- Verwijder de stekker niet uit het stopcontact door aan de haardroger te trekken, maar pak de stekker vast.

Belangrijke garantie informatie

De haardroger is grondig getest gedurende het productieproces om het hoogste niveau van veiligheid en gebruik te kunnen waarborgen. Het is wetenschappelijk ontworpen en zal bij normaal gebruik (zoals in deze instructies) niet defect raken.

 Qumax

— Personal Care —



Made in China