

尺寸：80*110

英文朝上

128g铜板

AG270 BLUETOOTH HEADPHONE



User Manual (EN) : P. 1-5
Gebruiksaanwijzing (NL) : P. 6-10

Preview


Thank you for purchasing the AG270. This manual contains all the information you need to use the AG270 wireless headphone. We'll walk you through the different functions of the headphone, including the controls, charging, connecting to your devices, and more. By following this guide you will be able to get the most out of your AG270 headphone.

Key features

Compatible with bluetooth-enabled devices
Foldable Design, Easy for carrying
Built-in HD microphone.
Built-in rechargeable battery.
Active noise cancelling.

Headphone configuration

Package contents
1X Headphone
1X Charging cable
1X Audio cable
1X Operation Manual

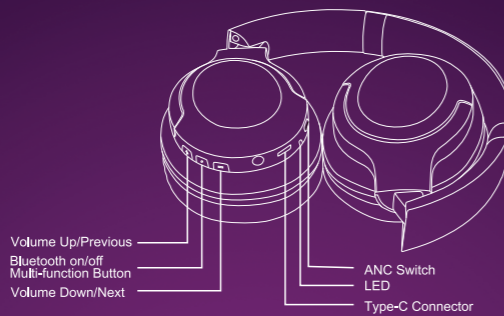

1

Button Operation



- ANC Switch
Push the bluetooth On/Off button upwards/downwards to turn on/off the headphone.
- Press once to play the Previous song
Holding Press this button to Increase the volume
- Press once to play the Next song
Holding Press this button to reduce the volume
- Answer/hang up the phone / Reject phone / Call back

1.Press this button shortly for pause/play under playing state

2.When a call comes in, you will hear a ring tone, Click this button to answer the call. During talking, Click this button to end the call.

3.When a call comes in, you will hear a ring tone, if you dont want to pick up the phone,you can holding click this button to reject the phone.

4.Double click this button to dial back the last call

2


Pairing the headphone

1.Fully charge bluetooth headphone before pairing
Connect charger plug to Micro USB port,button font change to red color means charging and change to invisible means fully charged.Red color per 5 seconds and alert sound rings per 30 seconds means low battery. It takes about two hours to fully charge.

2.Power on headphone:
Press and hold the button about 3 seconds to turn on the headphone, LED indicator flash blue and red alternately which means that the headphones are ready to be paired with your mobile device.

3.Keep bluetooth headphone and cell phone in one meter range,choose AG270 pairing the pairing indicator will always flash blue.

4.When you disconnect the device it will automatically pair and connect with the headphones the next time you turn on your device,provided Bluetooth is activated.

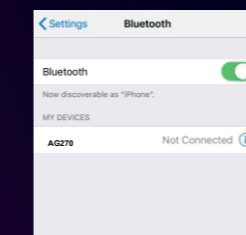

(Diagram 1)



(Diagram 2)

3

Charging the headphones

The headphones come with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully.
Connect the USB cable to a computer usb port or charging adapter and the Type-C plug to the charging jack of the headphones. The red led light will illuminate while the headphones are charging.

When the battery is fully charged, the led light will turn off automatically.

Using headphone without bluetooth

This headphone have a built-in AUX input which will allow you to listen to music from non-bluetooth device using a 3.5mm AUX cable (While using Aux in function, pls turn off the headphone).

Battery maintenance

In order to prolong battery life, turn off your headphone when not in use.
If the headphone is not in use for a long period of time, store it in a dry, safe location. The headphone will need to be charged every 2 month to maintain battery life.

Technical specifications

Type	Active Noise Cancelling Stereo Bluetooth Headphone
Channels	Stereo
Impedance	32Ω
Battery Capacity	400mAh Li-polymer
Sensitivity	95±3dB
BT Version	V5.0
Frequency Range	20Hz-20KHz
Working Time	ANC on:13 Hours;ANC off:20-23 Hours
Charging Interface	Type-c
Drive Diameter	40mm
Weight	218 g
Input Voltage	DC 5V

4

Malfunction and solution

Cant search the device	Pls check if the headphone is in pairing mode (Turn off the headphone and turn on the headphone again).
Audio discontinued	1. If it is in working range(less than 10m). 2. If there is obstacle between the headphone and the bluetooth device. 3. If the battery is low.

Care and maintenance

- Do not expose the unit to liquid, moisture, or humidity to avoid damage to the products internal circuitry.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the electronic device. destroy the battery, and or distort certain plastic parts.
- Do not dispose of the unit in fire as they may explode or combust.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not let the unit fall from high places doing so may damage the internal circuitry.
- Do not attempt to disassemble the unit.

Environment Protection
Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Guarantee
This item has a 2-year warranty. Defects caused by consumer misuse are excluded from the warranty. Contact us to find a solution to your problem.

RoHS CE FC Made in China

5

Introductie


Bedankt voor uw aankoop van de AG270. Deze handleiding bevat alle informatie die je nodig hebt om de AG270 draadloze koptelefoon te gebruiken. We zullen je door de verschillende functies van de koptelefoon leiden, inclusief de bedieningselementen, het opladen, het verbinden met je apparaten en meer. Door deze handleiding te volgen, ben je in staat om het meeste uit je AG270 koptelefoon te halen.

Belangrijkste functies

- Werkt met Bluetooth-apparaten
- Actieve ruisonderdrukking (noise cancelling)
- Gemakkelijk mee te nemen door opvouwbaarheid
- Ingebouwde microfoon
- Ingebouwde oplaadbare batterij

Pakketinhoud:

- 1x AG270 koptelefoon
- 1x Oplaadkabel
- 1x Audio kabel
- 1x Handleiding

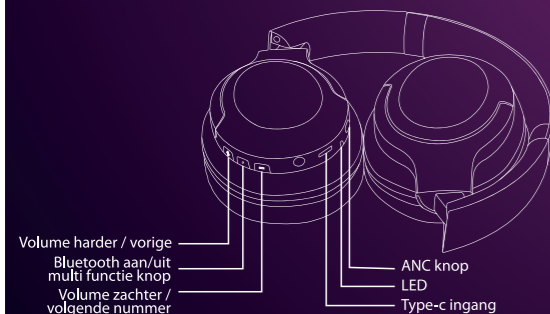

6

Knoppen



- ANC-schakelaar
Duw de bluetooth-aan/uit-knop, omhoog/omlaag om de hoofdtelefoon aan/uit te zetten.
- Druk eenmaal om het vorige nummer af te spelen
- Druk eenmaal om het volgende nummer af te spelen
- Inkomend telefoongesprek antwoorden/ophangen

- Druk kort op deze knop voor pauze.
- Bij een inkomend telefoongesprek hoor je een ringtone. Klik op deze knop om het telefoongesprek te beantwoorden. Tijdens het gesprek kun je ophangen door opnieuw op deze knop te klikken.
- Bij een inkomend telefoongesprek hoor je een ringtone. Wil je het gesprek afwijzen? Dan kun je deze knop ingedrukt houden en zal het gesprek afgewezen worden.
- Indien je dubbel op deze knop drukt bel je naar de laatste beller.

Koptelefoon verbinden

1. Laad de Bluetooth-koptelefoon volledig op voordat u gaat koppelen. Sluit de stekker van de oplader aan op de micro-USB-poort. De rode kleur betekent dat de koptelefoon aan het opladen is. Geen kleur betekent dat de koptelefoon volledig is opgeladen. Rode kleur per 5 seconden en waarschuwings-geluiden per 30 seconden betekent dat de batterij bijna leeg is. Het duurt ongeveer twee uur om de koptelefoon volledig op te laden.

2. Zet de koptelefoon aan:

7


Houd de knop ongeveer 3 seconden ingedrukt om de koptelefoon in te schakelen, LED-indicator knippert afwisselend blauw en rood, wat betekent dat de koptelefoon klaar is om te worden gekoppeld met uw mobiele apparaat.

3. Houd de Bluetooth-koptelefoon en mobiele telefoon binnen een bereik van één meter, kies AG270. Tijdens het koppelen zal de koppelingsindicator altijd blauw knipperen.

4. De volgende keer dat de koptelefoon aan wordt gezet zal deze automatisch koppelen, mits de Bluetooth van uw telefoon ingeschakeld is.



(Diagram 1)

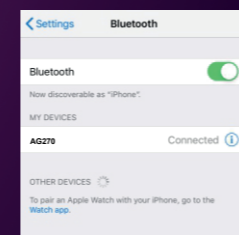

(Diagram 2)

8

Onderhoud batterij

- Om de levensduur te bevorderen is aangeraden om de koptelefoon uit te schakelen wanneer deze niet gebruikt wordt.
- Laadt de koptelefoon om de 2 maanden op, ook wanneer deze niet wordt gebruikt. Ook is het verstandig om deze te bewaren op een droge locatie. Vochtige locaties worden afgeraden.

Technische specificaties

Type	Active Noise Cancelling Stereo Bluetooth Headphone
Channels	Stereo
Impedance	32Ω
Battery Capacity	400mAh Li-polymer
Sensitivity	95±3dB
BT Version	V5.0
Frequency Range	20Hz-20KHz
Working Time	ANC on:13 Hours;ANC off:20-23 Hours
Charging Interface	Type-c
Drive Diameter	40mm
Weight	218 g
Input Voltage	DC 5V

Storingen & oplossingen

Kan de koptelefoon niet vinden.	Zet de koptelefoon uit en daarna weer aan. Controleer of deze in koppel-modus staat.
Muziek stopt	1. Het maximale bereik is 10 meter. 2. Zorg ervoor dat er geen obstakels tussen het apparaat en de koptelefoon staat. 3. De batterij is bijna leeg. Laadt de batterij op.

9

Onderhoud en waarschuwingen

- Voorom defecten door het artikel niet in aanraking met water en vloeistof te laten komen
- Gebruik geen schoonmaakmiddelen om het artikel te reinigen
- Het blootleggen van de koptelefoon aan extreem hoge of lage temperaturen kan leiden tot defecten van de batterij en ander onderdelen.
- Aanraking met vuur kan leiden tot explosies.
- Vermijd contact met scherpe voorwerpen omdat deze tot krassen en schade kunnen leiden.
- Laat het artikel niet van hoge hoogtes vallen, daar is deze niet tegen bestendig.
- Maak het artikel niet open. Dit mag enkel worden gedaan door daarvoor aangewezen reparatiecentrums.

Zorg ervoor dat het artikel niet in de prullenbak terecht komt. Dit artikel kan gerecycled worden. Neem contact op met de plaatselijke recyclebureaus voor de mogelijkheden.

Garantie

Dit artikel heeft een garantie van 2 jaar. Defecten die zijn veroorzaakt door verkeerd gebruik van de consumenten worden uitgesloten van de garantie. Neem contact met ons op om een oplossing te vinden voor uw probleem.

RoHS CE FC Made in China

10



© AG Brands B.V.
BOVENDIJK 203
3045PD ROTTERDAM
THE NETHERLANDS
www.agbrands.nl
DESIGNED IN THE NETHERLANDS

11