


Aye Kids
**2 IN 1
 KINDERCAMERA**
 Neem selfies en foto's van anderen!



HANDLEIDING

1 Product Overzicht

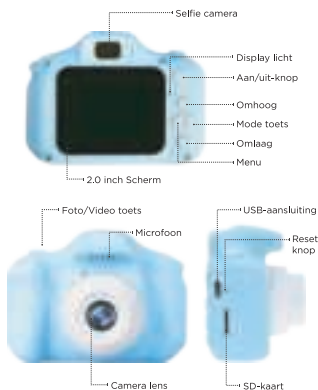

2 Toelichting functies

Aan/uit-knop
 ① In-/uitschakelen; ② Exit knop in menu mode

Mode
 De volgende modi kunnen in de standby-modus worden gezet:
 ① Opnamemodus ② Cameramodus
 ③ Video afspeelen of foto blader mode

Omhoog en omlaag knop
 Druk op de omhoog/omlaag knop om te navigeren in de menustand

Foto/Video toets
 ① In de cameramodus, druk je kort op deze toets om de opname te starten, nogmaals kort indrukken om de opname te stoppen;
 ② Druk kort op deze toets om een foto te nemen in de cameramodus;
 ③ Om over te schakelen naar selfie modus, druk kort op deze knop en vervolgens op de omlaag-knop;
 ④ In de menumodus is dit de bevestigingsknop

Microfoon
 Geluidsonvangstpoort van een video- of audiobestand

USB-aansluiting
 ① Kan worden gebruikt om gegevens over te brengen naar een PC
 ② Of als externe voeding om de batterij op te laden

SD-kaart
 Sleuf voor de installatie van de SD-kaart

Menuknop
 Druk kort op deze toets om het menu met instellingen op te roepen; Druk nogmaals op deze toets om het menu met menu te verlaten

Reset knop
 Als de camera niet werkt (bijvoorbeeld als hij vastloopt) steek dan een fijne naald in het gaatje om te resetten.

3 Gebruiksaanwijzing

In- en uitschakelen
 Druk op de **A** aan/uit-knop en houd deze ingedrukt om het toestel aan te zetten; de blauwe indicator zal oplichten wanneer hij ingeschakeld is; Druk nogmaals op de **A** aan/uit-knop en houd deze ingedrukt om het toestel uit te schakelen; de blauwe indicator zal weg zijn.

Selfie mode
 Druk kort op de "Mode knop" om over te schakelen naar de camera modus, om over te schakelen naar de selfie-modus. Druk je kort op de knop **V** omlaag; druk vervolgens op de "Video/Foto" knop om een foto te maken.

Camera mode
 Druk kort op de "Modusknop" om over te schakelen naar de cameramodus, de cameraresolutie en het camerapictogram worden weergegeven in de rechterbovenhoek van het scherm; Druk kort op de "Video/Foto" knop om de opname te starten, de opname-indicator begint te knipperen, wat aangeeft dat de opname bezig is.

Foto mode
 Druk kort op de "Modusknop" om over te schakelen naar de cameramodus, de cameraresolutie en het camerapictogram worden weergegeven in de rechterbovenhoek van het scherm; Druk kort op de "Video/Foto" toets om een foto te maken. Wanneer een foto is genomen, knippert de indicator één keer om aan te geven dat de foto voltooid is.

Video / Foto afspeelen
 Druk kort op de "Mode key" toets om over te schakelen naar de afspelmodus en het afspelicoon verschijnt in de rechterbovenhoek van het scherm. Druk kort op de **A** toets omhoog om het bestand naar boven te selecteren; Druk kort op de **V** toets omlaag om het bestand omlaag te selecteren;

Menu-instellingen
 Druk kort op "Menu" om het instelmenu op te roepen; door op de **A** omhoog-knop of **V** omlaag-knop te drukken, kan je omhoog en omlaag bladeren; Selecteer het instellingsitem dat gewijzigd moet worden en bevestig de wijziging door kort op de toets "Foto/Video" te drukken. Druk kort op de "Menu" knop om het menu te verlaten.

4 Gebruiksaanwijzing

USB-modus
 Sluit de kindercamera aan op je computer via een USB-kabel; In deze modus kunnen video- en fotobestanden worden bekeken

Batterijverbruik
 Raadpleeg de illustratie voor de batterij-indicatoren:




Er zijn 3 manieren om de batterij op te laden.

- ① Opladen met de Adapter (Let op: de adapter is niet inbegrepen)
- ② Opladen met een USB-kabel aan de computer
- ③ Opladen met de stroomvoorziening in de auto

Opmerking:
 Wanneer je dit product gebruikt, kan dit leiden tot het fenomeen van crash als gevolg van onjuiste werking. Je kan de batterij verwijderen of op de reset-knop drukken en het weer aanzetten om terug te keren naar normaal.

5 Inhoud verpakking



AyeWay B.V.
 Postbus 47
 1906ZG LIMMEN
CE RoHS


48*70mm(展开288*70mm)

Aye Kids
**2 IN 1
 KIDS CAMERA**
 Take selfies and photos of others!



PRODUCT MANUAL

1 Product Overview

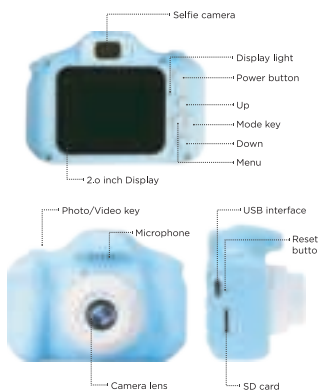

2 Button Function

Power button
 ① Power on / off; ② Exit button in menu mode.

Mode key
 The following modes can be switched to standby mode:
 ① Recording mode ② Camera mode
 ③ Video playback or photo browsing mode

Up and down button
 Press to select the option upwards/downwards in the menu mode

Photo/Video key
 ① In the camera mode, short press this button to start recording, short press again to stop recording;
 ② Short press this button to take a photo in the camera mode;
 ③ To switch to selfie mode, shortpress this button then press the down button;
 ④ In the menu mode, it is the confirmation button

Microphone
 Sound receiving port of video or an audio file

USB Interface
 ① Can be used to transfer data to a PC
 ② External power supply to charge the battery

SD card
 Slot for installing the SD card

Menu button
 Short press this button to call up the function setting menu; Press this button again to exit the function setting menu;

Reset button
 If the camera is not functioning, for example, if it crashes, take the fine needle into the hole to reset.

3 Operating Instructions

Power on and off
 Press and hold the **P** power button to turn it on, the blue indicator will light up when it is turned on; Press and hold the **P** power button again to turn it off, the blue indicator will be off

Camera mode
 Short press the "Mode button" to switch to camera mode, camera resolution and camera icon are displayed in the upper right corner of the screen;
 Short press the "Video/Photo" button to start recording, the recording indicator will start flashing, indicating that the recording is in progress.

Selfie mode
 Short press the "Mode button" to switch to camera mode, to switch to selfie mode, short press the **V** down button; then press the "Video/Photo" button to take a picture.

Photo mode
 Short press the "Mode button" to switch to camera mode, camera resolution and camera icon are displayed in the upper right corner of the screen;
 Short press the "Video/Photo" button to take a picture. When a picture is taken, the indicator flashes once, indicating that the photo is completed.

Video / Photo playback
 Short press the "Mode key" button to switch to the playback mode and the playback icon will be displayed in the upper right corner of the screen. Short press the **A** up button to select the file upwards; Short press the **V** down button to select the file down;

Menu settings
 Short press "Menu" to call up the setup menu; by pressing the **A** up button or **V** down button, you can cycle up and down in each setting item;
 Select the setting item that needs to be changed, and confirm the entry change by short pressing the "Photo/Video" button. Short press the "Menu" button to exit.

4 Operating Instructions

USB mode
 Connect the kids camera to your computer via USB cable; In this mode, video and photo files can be viewed

Battery usage
 For battery indicators, please refer to the illustration:




There are 3 ways to charge the battery and the blue charging indicator will light up during charging.

- ① Charging with the power adapter (Note the adapter is not included)
- ② Charging with a USB cable to the computer
- ③ Charging with car power supply

Remark:
 When using this product, it may cause the phenomenon of crash due to improper operation. You can remove the battery or press the reset button and turn it on again to return to normal.

5 Package Contents



AyeWay B.V.
 Postbus 47
 1906ZG LIMMEN
CE RoHS

6 Product Specification

Image sensor	GC0308
Display	2.0 inch color display
Lens	Fixed lens, 100 degree angle
Storage media	SD card, up to 32G
Photo format	JPG
Language	English, Russian, Japanese Chinese (Simplified & Traditional)
	Korean
Camera resolution	1080P, 720P, VGA
Time mark	On / Off
Motion detection	On / Off
Loop recording	Off, 1 min, 3 mins, 5 mins, 10 mins
Photo resolution	3M, 2M, 1.3M, VGA
Charging voltage	DC-5V
Support system	Windows me/2000/2003/XP/ Vista/Win7; Mac OS; Linux
Optical frequency	50HZ, 60HZ
Model	D600-0164-3703